


# Cartouche Installation

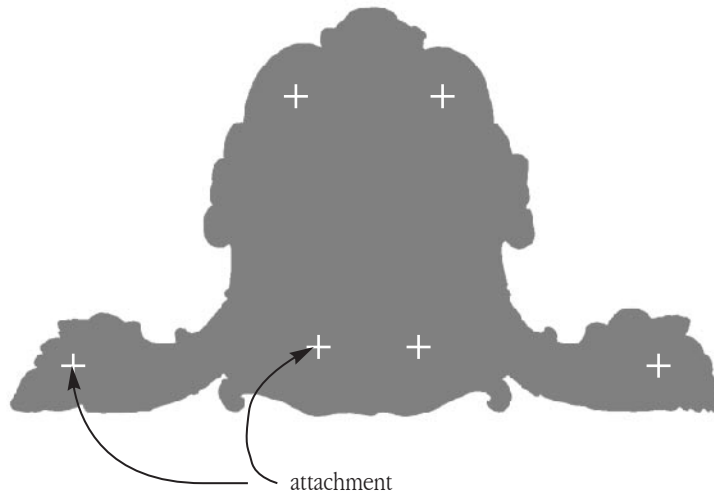

**Cartouche No. 7750**

1. Locate cartouche on wall.
2. Level cartouche and mark location.
3. Drill and countersink a sufficient number of holes in cartouche and if necessary locate anchors in wall to coincide with them.
4. Remove cartouche and apply construction adhesive on rear flange around entire perimeter.
5. Attach cartouche to wall with galvanized screws or lag bolts.
6. Caulk entire perimeter of cartouche.
7. Fill screw holes with glazing compound.
8. Prime and paint with good quality exterior latex paint.

## General Information

### Indoor Castings / Painting:

Castings made for indoor use are generally made of reinforced gypsum (plaster). Gypsum is not a weatherproof material unless specially treated. Standard priming and painting procedures should be used for finishing. Use a good grade latex or oil base paint. We do not recommend a high gloss finish. Prior to painting, make sure pieces are thoroughly dry.

### Outdoor Castings:

Castings made for outdoor use are made with a specially formulated mixture called "polymer modified gypsum". These castings can be used outdoors but must still be sealed and painted with exterior paint and caulked to prevent water intrusion. We recommend two coats of an oil base paint.



**FELBER**  
ORNAMENTAL  
PLASTERING CORP.

PO BOX 57, 1000 WEST WASHINGTON STREET  
NORRISTOWN, PENNSYLVANIA 19404  
FAX: 610-275-6636 1-800-392-6896 WEB: www.felber.net